

SENCOR®

SSI 0870GD



HANDHELD GARMENT STEAMER
Translation of the original manual

 


SENCOR®

SSI 0870GD




A

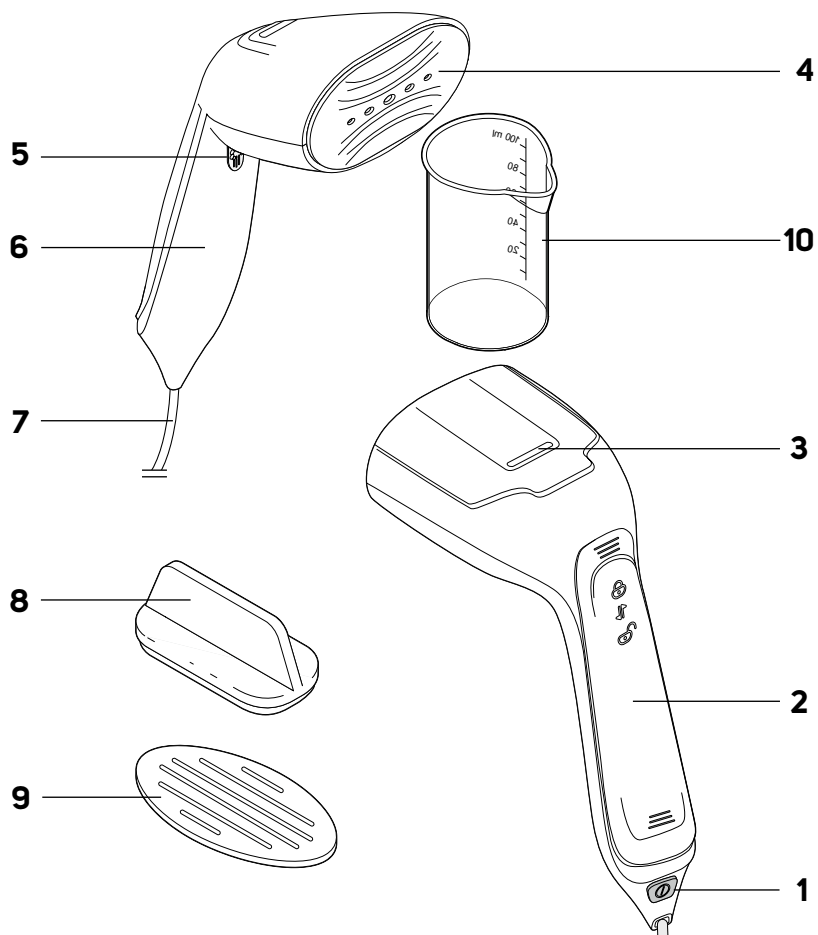


B

 
B1

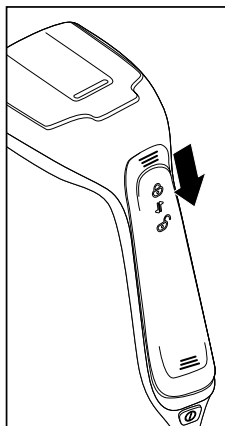


B2

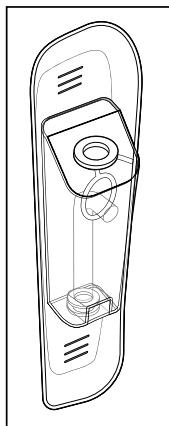 

B3

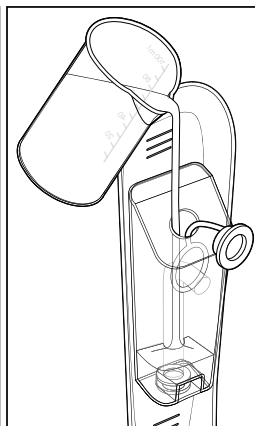 

B4

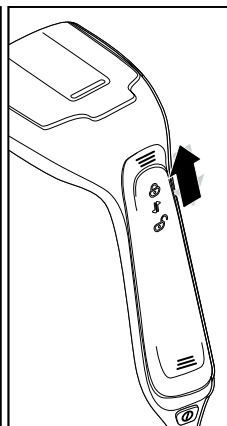 

EN Handheld Garment Steamer

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General Warnings

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.
- The steamer must not be left unattended when plugged into the power supply.
- Take extra care as the steamer produces steam.
- The plug must be pulled out of the socket before filling the water tank.
- The steamer must only be used according to the instructions provided here and stored on a flat, stable surface.

- The steamer must not be used if it has been dropped, if there are visible signs of damage, or if it leaks.
- Do not leave the steamer and its power supply within reach of children under 8 years of age when powered or cooling down.



WARNING. Hot surface.

- Surfaces may become hot during use.

Additional Important Safety Instructions for Use of the Appliance

- Before connecting the base to the power socket, ensure that the voltage indicated on its rating plate matches the voltage in the socket.
- Connect the base only to a properly grounded socket. Do not use an extension cord.
- Do not touch the steamer with wet or moist hands when connected to the power socket.
- To prevent the risk of electric shock, do not rinse the steamer under running water, spray it with water, or immerse it in water or any other liquid.
- Ensure that the power cable does not come into contact with water, moisture or a heated surface.
- Do not place heavy objects on the power cable. Make sure that the power cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the base from the power socket by pulling the plug of the power cable, not the cable itself. Otherwise, damage to the power cable or the socket may occur.
- Do not pull or carry the base by the power cable. Do not pull the steamer by its cable.
- Turn off the steamer and unplug the power cable from the socket before filling or emptying the water tank if you will not use the steamer, if you are not using the steamer, if you leave it unattended, if it is not functioning properly, if it is damaged, if you are planning to clean or store it.
- Do not use the steamer near electrical or electronic equipment, power sockets, cables, etc.
- Do not wrap the power cable around the steamer.
- Make sure that the power socket is easily accessible in case the power cable has to be disconnected suddenly.
- To avoid the risk of electric shock, do not attempt to repair or modify the steamer yourself. All repairs should be carried out by an authorised service centre. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.
- This steamer is intended for household use. Do not use it in industrial surroundings or outdoors.
- The steamer is designed for steaming and smoothing of clothes, upholstery, cushions, curtains, etc. made of common textiles.
- Do not place the steamer on or near an electric or gas stove or other sources of heat.
- Never steam clothes while wearing them.
- Do not touch the heated steaming surface. Otherwise, burns may occur.
- Ironed clothes may be hot immediately after removing the steamer. Take extra care to avoid burns.
- Never fill the water tank directly under the tap. Always use a suitable container for filling the tank. Do not add vinegar, descalers, or other additives to the tank.
- Do not use the steamer if the water tank is empty. This may damage the appliance.
- Allow the steaming surface to cool down before cleaning or any further handling of the steamer.

EN Handheld Garment Steamer

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

- Do not overfill the tank. Always fill to the MAX mark indicated on the tank during filling.



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.



Warning:

Do not use the steamer if the water tank is empty. This may damage the appliance.

DESCRIPTION OF THE STEAMER

- | | |
|--|----------------------------------|
| A1 Power on/off button | A6 Handle |
| A2 Water tank | A7 Power cable |
| A3 Power indicator | A8 Brush attachment |
| A4 Steaming surface with steam outlet | A9 Thermal insulation pad |
| A5 Steam release button | A10 Filling cup |

PURPOSE OF USE

- This handheld garment steamer is ideal for quickly smoothing out folds or creases from clothes using steam without the need for an ironing board. Clothes can be steamed on a hanger.
- The steamer can handle formal wear and stubborn fabrics but can be used throughout the household. For example, it can refresh and smooth curtains or straighten couch covers. It can remove unwanted odours and some stains.
- In addition to smoothing, it can be used for brushing clothes or removing lint, hair, pills and dirt.
- The appliance is not suitable for use in trade or industrial areas.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the outer surface of the steamer with a soft dry cloth.


FILLING THE WATER TANK



Warning:

Always ensure that the steamer is turned off and the power cable is disconnected from the power socket before filling the tank.

Use only distilled or demineralised water to fill the tank. The tank cannot be decalcified.

1. Push the water tank down towards the  symbol – see figure **B1**.
2. Turn the water tank so that the filling opening points upwards – see figure **B2**.
3. Remove the water tank cap and pour water into the tank – see figure **B3**. Wipe any spilled water with a dry cloth.
4. Put the cap back on, making sure it seals properly, and reinsert the tank by sliding it upwards along the handle – see figure **B4**.
- Use a filling measuring cup when filling the tank. Do not fill the water tank directly from the tap.

PREPARATION OF CLOTHING

- Before using the steamer, always check the care instructions on the garment's label. The steamer can be used on all materials marked with an iron symbol, such as synthetic fibres (viscose, polyester), silk, wool, cotton, linen, etc.
- If the garment care instructions prohibit ironing, do not use this steamer to smooth the garment. Otherwise, the garment could become damaged.
- Do not use the steamer on leather, velvet, impregnated furniture or steam-sensitive materials. Irreversible damage may occur.
- Clothing is easier to de-wrinkle if properly spread out after washing. Hang clothes on hangers to minimise wrinkles during drying.
- If unsure whether a garment is suitable for steam smoothing, test the steamer on an old piece of fabric or an inconspicuous part of the garment, such as the inner seam.
- Hang the garment on a hanger. Ensure there is sufficient space behind the fabric for air circulation to prevent moisture buildup. Also, check that there are no heat- or moisture-sensitive items near the garment that could be damaged by steam.
- Check that pockets are empty and that tabs such as cuffs and hems are turned downward.

USE OF THE HANDHELD STEAMER

- Upon first use, you may notice a slight odour from the steamer. This is a normal occurrence which disappears with use.
 - There may be slight residues from the manufacturing process on the steaming surface. Therefore, it is recommended to use the steamer on a small piece of cloth or towel to remove these residues.
1. Hang the garment on a hanger.
 2. Fully unwind the power cable and plug it into the power socket.
 3. Press the power on/off button to turn the steamer on.
 4. The indicator will light up. This indicates that the steamer is heating up.
 5. When the indicator goes off, the steamer is ready for use.
 6. Place the steamer against the garment and press the steam release button to start emitting steam. Keep the button pressed. After releasing the button, steam emission will stop.
 7. Move the steamer from top to bottom in close proximity to the garment. The emitted steam will straighten and smooth the fibres of the garment.
 8. If you need to interrupt the process, release the steam button and place the steamer head on the thermal insulation pad.
 9. If you are not using the steamer, turn it off using the power on/off button and allow it to cool completely before cleaning.



Warning:
HOT SURFACE AND HOT STEAM!
Take extra care when using and handling the steamer.
The steaming surface and the steam temperature are very hot. Serious injury and burns can occur with improper handling.

Never touch the steaming surface with your hands! Do not steam clothes directly on yourself or on others!



Note:

If the steamer stops producing steam during use, it needs to be refilled with water. Turn off the steamer, allow it to cool down and refill the water according to the instructions in the **"FILLING THE WATER TANK"** section.

Straightening of Garments

1. Hang the garment you want to smooth on a hanger. Hang trousers by their ends.
 2. Place the heated steamer against the garment and press the steam release button.
 3. With your free hand, grasp the garment from underneath and gently stretch it. At the same time, move the steamer from top to bottom to straighten the fibres of the garment. Repeat as necessary.
- If the garment has metal accessories such as zips, buttons, etc., be careful not to use the steamer directly over the metal. Discoloration of the metal or corrosion may occur.
 - For shirts with buttons, button the top button on the collar to help straighten the fabric. Move the steamer horizontally back and forth along the collar.
 - When steaming the sleeves, start at the shoulder area and move the steamer downwards. Steam and simultaneously stretch the sleeve downwards with your other hand.
 - For shirt pockets, move the steamer upwards against the fabric.
 - For dresses with ruffles, pleats, gathers, or sequins, keep the steamer at a short distance from the fabric.
 - Fabrics absorb moisture during steam smoothing. After steam smoothing, always allow the garments to dry completely before wearing them.



Warning:
Never put your free hand under the garment where you guide the steamer. Serious burns may occur due to very hot steam.

Steaming of Upholstery, Curtains, Cushions, etc.

- Before steaming curtains or drapes, ensure there are no power sockets behind them.
- Before steaming, always perform a test on a small, inconspicuous area.
- Steam curtains and drapes while they are hanging. There is no need to remove them before steaming. Follow the same procedure as for straightening garments.
- Curtains made from heavier fabrics will require more time to steam and smooth than curtains made from fine fabrics.

Steam Ironing

- The steamer can be used for steam ironing on an ironing board. However, before steam ironing, make sure that the garment is suitable for regular ironing at a high temperature. This information is provided on the care label of the garment.
- Spread the garment on the ironing board and place the steamer. Follow the same procedure as for straightening garments, just move the steamer back and forth.

Using the Brush Attachment

- The brush attachment is used for removing hair, pet hair, lint, fabric fibres etc. from clothing.
- Hang the garment on a hanger and use short strokes of the brush attachment from top to bottom to remove dirt from the garment. These will be caught by the bristles of the brush.

CLEANING AND MAINTENANCE

- Before cleaning, turn off the steamer, disconnect the power cable from the socket and allow the steamer to cool completely.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Cleaning the Steamer

1. When the steamer is cool, empty the water tank. Leave the lid open to allow the water tank to dry.
2. Wipe the outer surface of the steamer with a slightly damp sponge and dry it with a clean cloth.
3. Remove dirt from the bristles of the brush attachment. Dispose of these in the trash. Wipe the brush attachment with a slightly damp sponge.

Storage

- If you are not going to use the steamer, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Store the steamer in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage range 220–240 V~
Rated frequency 50–60 Hz
Rated input power 1,000 W
Water tank capacity 75 ml
Operating time (1 filled tank) approximately 4 to 6 minutes

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product.

By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point.

Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.

