



# Panasonic®

Operating Instructions  
(Household) Rechargeable Shaver  
Model No. ES-LT2N

## Contents

<b>Safety precautions.....</b>	<b>2</b>	<b>Cleaning the shaver .....</b>	<b>11</b>
<b>Intended use .....</b>	<b>5</b>	<b>Troubleshooting .....</b>	<b>13</b>
<b>Parts identification .....</b>	<b>6</b>	<b>Battery life .....</b>	<b>15</b>
<b>Operation and display of the switch lock .....</b>	<b>7</b>	<b>Removing the built-in rechargeable battery.....</b>	<b>15</b>
<b>Charging the shaver.....</b>	<b>8</b>	<b>Specifications .....</b>	<b>15</b>
<b>Using the shaver.....</b>	<b>9</b>		



Thank you for purchasing this Panasonic product.

**Before operating this unit, please read these instructions completely and save them for future use.**








## Safety precautions



To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

### Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.






 <b>DANGER</b>	Denotes a potential hazard that will result in serious injury or death.
 <b>WARNING</b>	Denotes a potential hazard that could result in serious injury or death.
 <b>CAUTION</b>	Denotes a hazard that could result in minor injury.

The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.

## WARNING

### ► Power supply

-  **Do not connect or disconnect the adaptor to a household outlet with a wet hand.**  
- Doing so may cause electric shock or injury.
- Do not immerse the AC adaptor in water or wash with water.**  
**Do not place the AC adaptor over or near water filled sink or bathtub.**
-  **Never use the appliance if the AC adaptor is damaged or if the power plug fits loosely in a household outlet. Do not damage, modify, or forcibly bend, pull, or twist the cord.**  
**Also, do not place anything heavy on or pinch the cord.**  
- Doing so may cause electric shock or fire due to a short circuit.
-  **Do not use in a way exceeding the rating of the household outlet or the wiring.**  
- Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.
-  **Do not use anything other than the supplied AC adaptor. Also, do not charge any other product with the supplied AC adaptor.**  
- Doing so may cause burn or fire due to a short circuit.
-  **Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the AC adaptor. Fully insert the adaptor.**  
- Failure to do so may cause fire or electric shock.





## **WARNING**

### ► In case of an abnormality or malfunction

**Immediately stop using and remove the adaptor if there is an abnormality or malfunction.**

- Failure to do so may cause fire, electric shock, or injury.

**<Abnormality or malfunction cases>**



• **The main unit, adaptor or cord is deformed or abnormally hot.**

• **The main unit, adaptor or cord smells of burning.**

• **There is abnormal sound during use or charging of the main unit, adaptor or cord.**

- Immediately request inspection or repair at an authorized service center.

### ► This product

**This shaver has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use, or leave in a high temperature environment.**



- Doing so may cause overheating, ignition, or explosion.

**Do not modify or repair.**



- Doing so may cause fire, electric shock, or injury.  
Contact an authorized service center for repair (battery change etc).



**Never disassemble except when disposing of the product.**

- Doing so may cause fire, electric shock, or injury.

### ► Cleaning



**Always unplug the adaptor from a household outlet when cleaning.**

- Failure to do so may cause electric shock or injury.

**Regularly clean the power plug and the appliance plug to prevent dust from accumulating.**



- Failure to do so may cause fire due to insulation failure caused by humidity.  
Disconnect the adaptor and wipe with a dry cloth.

**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**



- Failure to do so may cause an accident or injury.

**The supply cord cannot be replaced. If the cord is damaged, the AC adaptor should be scrapped.**



- Failure to do so may cause an accident or injury.

### ► Preventing accidents

**Do not store within reach of children or infants. Do not let them use it.**



- Putting the inner blades, the cleaning brush and/or the oil container in the mouth may cause accidents and injury.

**If oil is consumed accidentally, do not induce vomiting, drink a large amount of water and contact a physician.**



**If oil comes into contact with eyes, wash immediately and thoroughly with running water and contact a physician.**


- Failure to follow these instructions may result in physical problems.






## CAUTION

### ► Protecting the skin

 **Do not use excessive pressure to apply the system outer foil to your lip or other part of your face. Do not apply the system outer foil directly to blemishes or injured skin.**

- Doing so may cause injury to the skin.

**Do not forcefully press the system outer foil. Also, do not touch the system outer foil with fingers or nails when in use.**

 **Do not use this product for hair on head or any other part of the body.**

- Doing so may cause injury to skin or reduce the life of the system outer foil.

 **Do not touch the blade section (metallic section) of the inner blade.**

- Doing so may cause injury to your hands.

 **Check the system outer foil for cracks or deformations before use.**

- Failure to do so may cause injury to the skin.

 **Be sure to place the protective cap on the shaver when carrying around or storing.**

- Failure to do so may cause injury to skin or reduce the life of the system outer foil.

### ► Note the following precautions

 **Do not allow pins or trash to adhere to the power plug or the appliance plug.**

- Doing so may cause electric shock or fire due to a short circuit.

 **Do not share your shaver with your family or other people.**

- Doing so may result in infection or inflammation.

 **Do not drop or hit against other objects.**


- Doing so may cause injury.

 **Do not wrap the cord around the adaptor when storing.**

- Doing so may cause the wire in the cord to break with the load, and may cause fire due to a short circuit.

 **Disconnect the adaptor from the household outlet when not charging.**

- Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.

 **Disconnect the adaptor or the appliance plug by holding onto the adaptor or the appliance plug instead of the cord.**

- Failure to do so may cause electric shock or injury.





## ► Disposing of the rechargeable battery

### **DANGER**

The rechargeable battery is exclusively for use with this shaver. Do not use the battery with other products. Do not charge the battery after it has been removed from the product.

- Do not throw into fire or apply heat.
  - Do not hit, disassemble, modify, or puncture with a nail.
  - Do not let the positive and negative terminals of the battery get in contact with each other through metallic objects.
  - Do not carry or store the battery together with metallic jewelry such as necklaces and hairpins.
  - Do not charge, use, or leave the battery where it will be exposed to high temperatures, such as under direct sunlight or near other sources of heat.
  - Never peel off the tube.
- Doing so may cause overheating, ignition, or explosion.



### **WARNING**

**After removing the rechargeable battery, do not keep it within reach of children and infants.**



- The battery will harm the body if accidentally swallowed. If this happens, consult a physician immediately.

**If the battery fluid leaks out, take the following procedures. Do not touch the battery with your bare hands.**



- The battery fluid may cause blindness if it comes in contact with your eyes. Do not rub your eyes. Wash immediately with clean water and consult a physician.
- The battery fluid may cause inflammation or injury if it comes in contact with the skin or clothes. Wash it off thoroughly with clean water and consult a physician.

### **Intended use**

- This WET/DRY shaver can be used for wet shaving using shaving lather or for dry shaving. You can use this watertight shaver in the shower and clean with water. The following symbol means suitable for use in a bath or shower.



#### ► Notes


- Treat yourself to wet lather shaves for at least three weeks and notice the difference. Your Panasonic WET/DRY shaver requires a little time to get used to because your skin and beard need about a month to adjust to any new shaving method.
- Do not bring the system outer foil into contact with hard object. Doing so may damage the blades as they are very thin and deform easily.
- Do not dry the main unit with a dryer or a fan heater. Doing so may cause malfunction or deformation of the parts.





- Do not leave the shaver exposed to direct sunlight with the foil frame detached.  
Doing so may deteriorate the waterproof rubber and degrade waterproof function, which may cause to malfunction.
- Store the shaver in a place with low humidity after use.  
Failure to do so may cause malfunction due to condensation or rust.
- Keep both the inner blades inserted. If only one of the inner blades is inserted, the shaver may be damaged.
- If you clean the shaver with water, do not use salt water or hot water. Do not soak the shaver in water for a long period of time.

## Parts identification

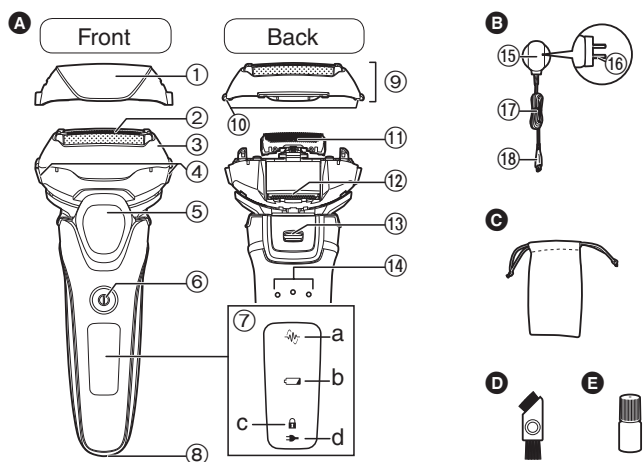

### A Main body

- ① Protective cap
- ② System outer foil
- ③ Foil frame
- ④ Foil frame release buttons
- ⑤ Finger rest
- ⑥ Power switch  
To turn the shaver on and off and also lock and unlock the power switch.
- ⑦ Lamp display
  - a. Shaving sensor lamp (⚡)
  - b. Battery capacity lamp (🔋)
  - c. Switch lock lamp (🔒)
  - d. Charge status lamp (➡)

### ⑧ Appliance socket

- ⑨ Outer foil section
  - ⑩ System outer foil release buttons
  - ⑪ Inner blades
  - ⑫ Trimmer
  - ⑬ Trimmer handle
  - ⑭ Main body rear terminals
- B AC adaptor (RE7-87)**
- ⑮ Adaptor
  - ⑯ Power plug
  - ⑰ Cord
  - ⑱ Appliance plug

### Accessories







- C Travel pouch**
- D Cleaning brush**
- E Oil**









## Operation and display of the switch lock

### ► Locking the power switch


 
<p>1. Press the power switch once and then release.</p> <ul style="list-style-type: none"> <li>• The shaver starts operating.</li> </ul>	<p>2. Press the power switch for more than 2 seconds when the shaver is operating.</p> <ul style="list-style-type: none"> <li>• The shaver will stop operating.</li> </ul>	<p>3. Release the power switch.</p>
		
		
The switch lock lamp is off.	The switch lock lamp will light up.	The switch lock lamp will turn off after 5 seconds.

### ► Unlocking the power switch

<p>1. Press the power switch for more than 2 seconds.</p>	<p>2. Once the shaver starts operating, release the power switch.</p>
	
	
The switch lock lamp will blink.	The switch lock lamp will turn off.

- The power switch cannot be unlocked while charging.

### ► Checking the power switch is locked

<p>Press the power switch while it is locked.</p>


The switch lock lamp will blink and then turn off after 5 seconds.

- You can also check this by unplugging the AC adaptor while charging.






## Charging the shaver

### 1 Insert the appliance plug into the shaver.

- Turn the shaver off before inserting.

### 2 Plug in the adaptor into a household outlet.

- Wipe off any water droplets on the appliance socket.
- Check that the charge status lamp (→) glows.
- Charging is completed after approx. 1 hour. The charging time may differ with the charging capacity.
- Charging the appliance after each use will not affect the battery life.

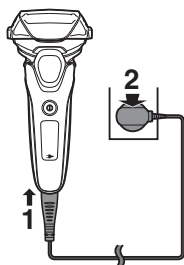

### 3 Disconnect the adaptor after charging is completed.

- Charging the battery for more than 1 hour will not affect battery performance.

#### Note

You cannot operate the shaver while charging.

#### While charging



The charge status lamp (→) glows.

#### After charging is completed



The charge status lamp (→) turns off.

#### Abnormal charging



The charge status lamp (→) will blink twice every second.

- Recommended ambient temperature for charging is 10 – 35 °C. It may take longer to charge or the battery may fail to charge properly in extremely high or low temperatures. Charge the shaver within the recommended ambient temperature range.
- When charging the shaver for the first time or when it has not been in use for more than 6 months, the charging time may change or the charge status lamp (→) may not glow for a few minutes. It will eventually glow if kept connected.
- If there is noise from radio or other source while using the shaver, move to a different location to use the shaver.






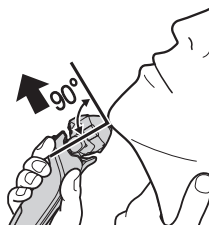


## Using the shaver

### 1 Press the power switch.

- The power cannot be turned on when the switch lock lamp (  ) blinks, as the power switch is locked. Press the power switch for more than 2 seconds to unlock. (See page 7.)

### 2 Hold the shaver as illustrated.



### 3 Shave by slowly gliding the shaver over your face against the grain of the beard.

- Start shaving by applying gentle pressure to your face. Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard. You may gently increase the amount of pressure as your skin becomes accustomed to this shaver. Applying excessive pressure does not provide a closer shave.

#### ► Notes

- If you press the power switch for more than 2 seconds, the sonic vibration cleaning mode is activated. (See page 11.) You cannot shave in this mode.
- Do not place your fingers on the power switch while using the shaver. This may cause the shaver to lock the power switch or turn off. Place your fingers on the finger rest while using the shaver.
- The appliance may not operate in an ambient temperature approximately 5 °C or lower.

- Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal.
- The shaving sensor may not respond depending on the type of the shaving gel and shaving foam, but this is normal.
- The shaving sensor may not respond when the remaining battery capacity is low. If this happens, recharge the shaver.
- Avoid the following situations to prevent damaging the system outer foil. Applying pressure to any part of the system outer foil or bringing the system outer foil into contact with hard object may cause damage on the system outer foil.
  - Shaving with only a part of the system outer foil.
  - Finger or nail coming into contact with the system outer foil.

#### ► Switching the shaver head

You can change the pivot action.

 
##### FREE

You can move the shaver head.



##### LOCK


You can lock the shaver head.






## ► Using the trimmer

Slide the trimmer handle up to the “mm” position so that the trimmer stands upright.

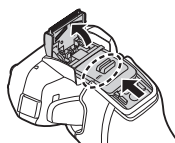

Press and hold the lock release button (a) and slide the trimmer handle down to lower the trimmer.

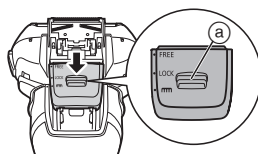


## Trimming sideburns

Slide the trimmer handle up. Turn the shaver on and place at a right angle to your skin and move downwards to trim your sideburns.



## Pre-shave

The trimmer can be used for a pre-shave of long beards. Shave your beard with the shaver head after the pre-shave.

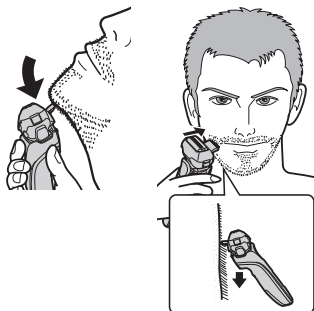

## Reading lamps when using

### While using



The shaving sensor lamp (☺) glows.

### When the battery capacity is low



The battery capacity lamp (↔) blinks when operating the shaver.

• You can shave 2 to 3 times after the battery capacity lamp (↔) blinks. (This will differ depending on usage.)

- The shaver can be used for approximately 2 weeks with a full charge. (Based on one 3-minute dry-shave use per day until the battery is exhausted)
- The number of usable days varies depending on the following conditions.
  - Beard thickness
  - Pressure applied to the skin
  - Ambient temperature
  - Usage frequency of the sonic vibration cleaning mode






## Cleaning the shaver

Do not use kitchen, bathroom, or toilet detergents. Also, do not wipe with thinners, benzine, alcohol etc. Doing so may result in malfunction.

- Turn the power switch OFF, and disconnect the AC adaptor.
  - Unlock the switch lock.
- Apply some hand soap and some water to the system outer foil.
- Press the power switch for more than 2 seconds to activate the sonic vibration cleaning mode.
  - The battery capacity lamp (◁) and the charge status lamp (⇒) blink alternately.
  - After about 20 seconds, it will be automatically turned off.
- Remove the outer foil section and press the power switch for more than 2 seconds to activate the sonic vibration cleaning mode.
- Clean the shaver, the outer foil section, and the trimmer with running water.
  - After rinsing with water, shake the shaver up and down for a few times to remove excess moisture.
  - Hitting the vanity, etc., while shaking the shaver may cause malfunction.
  - Splashing is reduced by rinsing the shaver in sonic vibration cleaning mode.
- Wipe off any drops of water with a dry cloth.

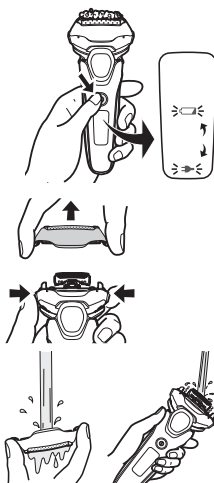

- Dry the outer foil section, the shaver, and the trimmer completely.




- Attach the outer foil section to the shaver.
- Lubricate the shaver.

## Lubrication

To maintain shaving comfort for a long time, it is recommended that the oil provided with the shaver is used.


- Switch off the shaver.
- Apply one drop of oil to each of the system outer foil.
- Raise the trimmer and apply a drop of oil.
- Switch the shaver on, and run it for approximately five seconds.
- Switch off the shaver, and wipe off any excess oil from the system outer foil with a soft cloth.

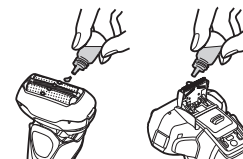

## Cleaning with the brush

### ► Cleaning with the long brush

Clean the system outer foil (a), the shaver body (b) and the trimmer (c) using the long brush.

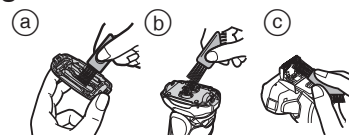




### ► Cleaning with the short brush

Clean the inner blades using the short brush by moving it in direction (A).

- Do not move the short brush in direction (B) as it will damage the inner blades and affect their sharpness.
- Do not use the short brush to clean the system outer foil.

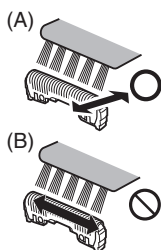


### Replacing the system outer foil and the inner blades

system outer foil	once every year
inner blades	once every two years


### ► Removing the outer foil section

Press the foil frame release buttons and lift the outer foil section upwards.

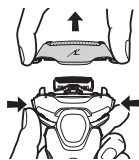


### ► Attaching the outer foil section

After turning the foil frame mark (⚡) to the front, securely attach the outer foil section to the shaver until it clicks.

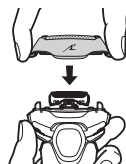


### ► Replacing the system outer foil

1. Press the system outer foil release buttons and pull down the system outer foil.
2. Align the foil frame mark (⚡) and the system outer foil mark (△) and securely attach together until it clicks.
  - The system outer foil cannot be reversely attached.
  - Always insert the system outer foil to the foil frame when attaching to the shaver.
  - Do not press the system outer foil release buttons with excessive force. Doing so may bend the system outer foil, preventing complete attachment to the foil frame.

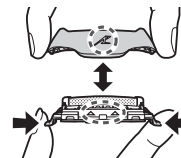

### ► Replacing the inner blades

1. Remove the inner blades one at a time.
2. Insert the inner blades one at a time.

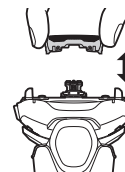

### ► Replacement parts

Replacement parts are available at your dealer or Service Center.

Replacement parts for ES-LT2N	System outer foil and inner blades	WES9015
	System outer foil	WES9089
	Inner blades	WES9068





## Troubleshooting

Perform the following actions.

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorized by Panasonic for repair.

Problem	Action
The power switch does not turn ON.	▶ Unlock the switch lock. (See page 7.)
Shavings fly out in all directions.	▶ This can be improved by cleaning every time after shaving. ▶ Clean the inner blades with the brush when shavings are adhering to the inner blades.
System outer foil gets hot.	▶ Apply oil. (See page 11.) ▶ Replace the system outer foil if it is damaged or deformed. (See page 12.)
Operating time is short even after charging.	▶ Apply oil. ▶ When the number of operations per charge starts to decrease, the battery is nearing the end of its life.
The odor is getting stronger.	▶ This can be improved by cleaning every time after shaving.
The driving sound changes while shaving.	▶ While the shaving sensor lamp glows, the shaving sensor is operating. The sound changes depending on the beard thickness.

Problem	Action
You do not get as close a shave as before.	▶ This can be improved by cleaning every time after shaving. ▶ Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades: System outer foil: Approximately 1 year Inner blades: Approximately 2 years ▶ Apply oil.
Shaver stopped functioning even after charging.	▶ The appliance may not operate in an ambient temperature approximately 5 °C or lower. ▶ The battery has reached the end of its life.
Makes a loud sound.	▶ Apply oil. ▶ The shaver makes a high-pitched sound due to the linear motor drive. This does not indicate a problem. ▶ Confirm that the blades are properly attached. ▶ Clean the system outer foil with the brush.





Problem	Action
The shaving sensor does not respond.	▶ Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal.
	▶ The shaving sensor may not respond depending on the type of the shaving gel and shaving foam, but this is normal.
	▶ The shaving sensor may not respond when the remaining battery capacity is low. If this happens, recharge the shaver.
	▶ Apply oil. The shaving sensor may not respond when there is not enough oil on the blades.
The shaving sensor responds even though the shaver is not in contact with the skin.	▶ Clean the beard trimmings from the shaver.
	▶ When the shaver is extremely dirty, remove the foil frame and wash with water. (See page 11.)
	▶ Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades: System outer foil: Approximately 1 year Inner blades: Approximately 2 years

## FAQ

Question	Answer
Will the battery deteriorate if not used for an extended period of time?	▶ The battery will deteriorate if not used for over 6 months, so make sure to perform a full charge at least once every 6 months.
Can I charge the shaver after every use?	▶ The battery used is a lithium-ion, so charging after every use will have no effect on battery life.
What is the constituent of the dedicated oil?	▶ Constituent of the oil is liquid paraffin.





## Battery life

The life of the battery is 3 years. The battery in this shaver is not intended to be replaced by consumers. Have the battery replaced by an authorized service center.

## Removing the built-in rechargeable battery


**Remove the built-in rechargeable battery before disposing of the shaver.**

Please make sure that the battery is disposed of at an officially designated location if there is one.

This figure must only be used when disposing of the shaver, and must not be used to repair it. If you dismantle the shaver yourself, it will no longer be waterproof, which may cause it to malfunction.

- Remove the shaver from the AC adaptor.
- Press the power switch to turn on the power and then keep the power on until the battery is completely discharged.

- Perform steps ① to ④ and lift the battery, and then remove it.
- Take care not to short circuit the positive and negative terminals of the removed battery, and insulate the terminals by applying tape to them.

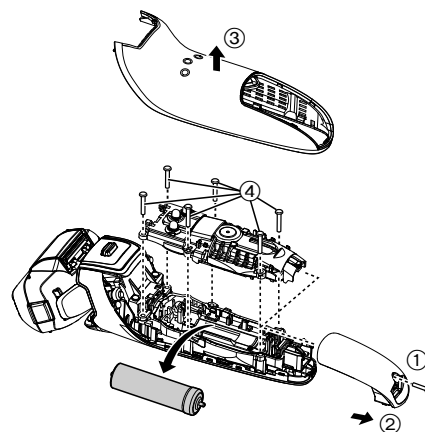

### For environmental protection and recycling of materials

This shaver contains a Lithium-ion battery. Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

## Specifications

Power source	See the name plate on the AC adaptor. (Automatic voltage conversion)
Motor voltage	3.6 V $\text{---}$
Charging time	Approx. 1 hour

This product is intended for household use only.





Panasonic Corporation  
<http://www.panasonic.com>  
© Panasonic Corporation 2015

Printed in Japan  
ES9700LT2N1H Y0615-0

Ⓕ EN

