

REMINGTON®

EST. NEW YORK 1937




Style Series Foil Shaver F2

 www.remington.co.uk

Register online for an **EXTRA** year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

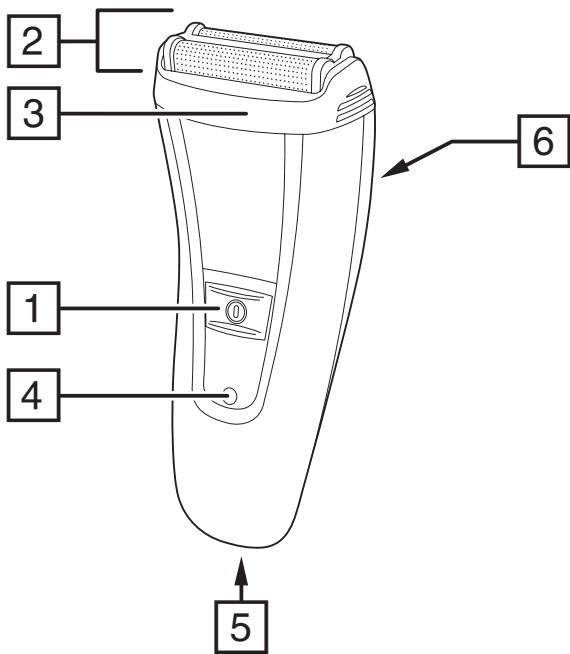

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- **WARNING:** Keep the appliance dry.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference SW-047010UK.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------|-----------------------------|
| 1. On/off switch | 6. Pop-up trimmer (on back) |
| 2. Shaving foils | Not shown: |
| 3. Hair pocket | • Head guard |
| 4. Charging indicator | • Adaptor |
| 5. Charging connector | • Cleaning brush |
-

GETTING STARTED

CHARGING YOUR SHAVER

1. Ensure the product is switched off.
2. Connect the charging adaptor to the product and then to the mains.

CHARGING INDICATOR

Charge Level	Indicator
Charging	LED will show
Fully charged	LED will continue to show

- Run time from fully charged is up to 40 minutes.
- Charge time from empty is 16 hours.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

SHAVING

1. Switch the shaver on by pressing the on/off switch.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Hold the shaving head so that the foils touch your face.
4. Use short, linear strokes.

TRIMMING

1. Slide up the trimmer release button to activate the trimmer.
2. Hold the trimmer at a right angle to your skin.
3. To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the foil heads.

CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.

1. Pull the foil assembly up to remove from the hair pocket.
 2. Gently tap out the excess hair shavings and use a cleaning brush to clean out the hair pocket if necessary.
 3. Do not use a brush to clean the shaving foils.
 4. Replace the head assembly.
- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

REPLACING THE FOILS AND CUTTERS

To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced every six months.

SIGNS THAT YOUR FOILS AND CUTTERS NEED REPLACING.

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

1. Remove the shaver head (pull the head up and off).
2. Insert the new foil assembly on the hair pocket, press down and click into place.

REPLACING THE CUTTERS

1. Grasp the cutter between your thumb and forefinger and pull upwards.
2. Snap the new cutter into the oscillator tip. Note: DO NOT press on the cutter ends as this may cause damage.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Run the shaver until the motor stops.
 2. Remove the foil assembly to expose two screws.
 3. Using a small screwdriver, unscrew the screws and a single screw off the back housing.
 4. Pry off the rear housing and expose the printed circuit board and battery.
 5. Cut the tabs which connect the battery to the circuit board and remove the battery.
- The battery is to be disposed of safely.
-

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	SW-047010UK
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	4.7 V ---
Output current	0.1 A
Output power	0.47 W
Average active efficiency	≥40.4%
Efficiency at 10%	-
No load power consumption	≤0.1W

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any

economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE


UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk
productsupport@Remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>
productsupport@Remington.co.uk

Ref. No. F2002

Type No. PF7200

23/UK/ F2002 T22-7002396 Version 01 /23

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester

M35 0HS

www.remington.co.uk

© 2023 Spectrum Brands, Inc.