

BaByliss®



Made in China
Fabriqué en Chine

MS750E-F93a

ENGLISH

MS750E

Read the safety instructions first.

HOW TO USE

WARNING! Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.

WARNING! Do not touch the hot barrels or metal parts of the appliance whilst hot.

INSTRUCTIONS FOR USE

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling.
- Fit the required attachment as described below, ensuring that the attachment is locked into position.
- Plug the appliance into a suitable mains socket and slide the switch to the 'I' position to turn on, the 'ON' indicator light will illuminate and will flash until the heat setting selected has been reached.

Please note: Before styling make sure the universal heat glove is worn on the hand which is wrapping the hair around the barrel.

- During use, do not place the appliance on any heat sensitive surface, even when using the heat wrap provided.
- Allow the appliance to heat up.
- Slide the switch to 'O' position to turn off and unplug the appliance.
- Allow to cool before storing away.

IMPORTANT! The barrels of the appliance will become very hot when plugged in and switched on. Before fixing or removing any attachments, ensure the appliance is completely cool, switched off and unplugged.

3 Barrel Attachments

To create curls, waves and texture:

- Use the conical wand to create smooth curls
- Use the oval wand to add volume and loose waves
- Use the twisted wand to create a beachy textured finish

Fitting the Attachments

IMPORTANT! Before fixing or removing attachments, ensure the appliance is cool, switched off and is unplugged.

- Turn the locking ring on the handle as far as possible to the right to the release position marked with the unlock  symbol.
- Align the attachment to the locking ring on the power handle.
- Push the attachment into the power handle until the heat rest is flush against the locking ring.
- If there is resistance, check the locking ring is rotated as far as possible to the release position marked with the unlock  symbol.
- Once the attachment is in place, secure it by turning the locking ring as far as possible to the left to the lock position marked with the lock  symbol.

Removing the Attachments

IMPORTANT! Before fixing or removing any attachments, ensure the appliance is cool, switched off and unplugged.

- Turn the lock ring as far as possible to the release position marked with the unlock  symbol.
- Pull the attachment away from the handle.

Instructions for use - Oval and Conical Wand barrel attachments

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Wind the hair around the barrel at a slight angle, so the hair wraps around the chosen barrel in a spiral motion. As you wind the hair around the barrel, ensure the hair is distributed evenly so the entire section is touching the barrel, try not to overlay the hair. If using the conical barrel attachment, start winding hair at the wider end of the barrel.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
- To remove the appliance from the hair, pull appliance away.
- Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away.

Instructions for use - Twisted Wand barrel attachment

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- To create texture through the hair, wind each section around the barrel spirally distributing over all sections of the barrel. Take care to avoid the hot surface of the barrel touching the scalp, face, eyes and neck.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
- To remove the appliance from the hair, twist the appliance away.
- Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away.

Heat Settings

If you have delicate, fine, bleached or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings. It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

Below is a guide of the temperature settings:

0 = OFF

I = 180°C

II = 210°C

Heat Protection Mat

This appliance comes with a heat protection mat for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow the appliance to fully cool down before storing away. Continue to keep out of the reach of children as it will remain hot for several minutes.

Heat Protective Glove

IMPORTANT! A universal heat protective glove has been supplied to help protect the hand from temporary contact with the barrel when wrapping the hair around the appliance. Please note the heat protective glove is only designed to give initial contact protection. Discomfort will be caused with prolonged contact with the hot surface.

Auto Shut Off

This appliance has an automatic shut off feature for added safety. If the wand is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the switch to the '0' setting, then slide the switch to the relevant setting to turn the power on again.

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

BABYLISS SARL
ZI du Val de Calvigny
59141 Iwuy
France

www.babyliss.com

FAC 2022/05

IB-22/055-01