

Аккумулятор можно использовать вместо оригинального:

JVC

BN-V107	BN-V107B	BN-V107S
BN-V107SU	BN-V107U	BN-V107UB
BN-V107US	BN-V114	BN-V114B
BN-V114S	BN-V114SU	BN-V114U
BN-V114UB	BN-V114US	

Подходит к моделям:

JVC

GR-DVP1	GR-DVP1EG	GR-DVP1T
GR-DVP3	GR-DVP3EG	GR-DVP3ST
GR-DVP3U	GR-DVP5	GR-DVP5EG
GR-DVP7	GR-DVP7A	GR-DVP7A-BK
GR-DVP7A-SL	GR-DVP7ED	GR-DVP7EG
GR-DVP7EK	GR-DVP7SH	GR-DVP7U
GR-DVP7USI	GR-DVP8	GR-DVP8E
GR-DVP9	GR-DVP9E	GR-DVP9U
GR-DVP9US	GR-DX100	GR-DX100E
GR-DX100EK	GR-DX103K	GR-DX106
GR-DX107	GR-DX115	GR-DX117
GR-DX25	GR-DX25E	GR-DX25EK
GR-DX27	GR-DX27E	GR-DX28
GR-DX300	GR-DX300E	GR-DX300K
GR-DX300U	GR-DX300US	GR-DX307
GR-DX307E	GR-DX307US	GR-DX317
GR-DX35	GR-DX35E	GR-DX35K
GR-DX37	GR-DX37AC	GR-DX45
GR-DX48	GR-DX48E	GR-DX55
GR-DX55E	GR-DX57	GR-DX57AC
GR-DX57E	GR-DX67	GR-DX73K
GR-DX75	GR-DX75E	GR-DX75US
GR-DX76	GR-DX77	GR-DX77AC
GR-DX77US	GR-DX78	GR-DX85
GR-DX95	GR-DX95E	GR-DX95EK
GR-DX95K	GR-DX95U	GR-DX95US
GR-DX97	GR-DX97AC	GR-DX97E
GR-DX97US		