

Подходит к моделям:

HITACHI

CGR-DU06E/1B DZ-BD10H DZ-BD70

DZ-BD70A DZ-BD70E DZ-BD7H

DZ-BD7HA DZ-BD7HE DZ-BD9H

DZ-BX35 DZ-BX35A DZ-BX35E

DZ-BX37E DZ-GX20 DZ-GX20A

DZ-GX20E DZ-GX25M DZ-GX3100

DZ-GX3100A DZ-GX3100E DZ-GX3200

DZ-GX3200A DZ-GX3200E DZ-GX3300(B)

DZ-GX3300(S) DZ-GX3300A DZ-GX3300E

DZ-GX5000A DZ-GX5020 DZ-GX5020A

DZ-GX5020E DZ-GX5060 DZ-GX5060SW

DZ-GX5080A DZ-GX5100 DZ-GX5100E

DZ-GX5100SW DZ-GX5300 DZ-HD90

DZ-HS300A DZ-HS300E DZ-HS301E

DZ-HS301SW DZ-HS303 DZ-HS303A

DZ-HS303E DZ-HS303SW DZ-HS401

DZ-HS403 DZ-HS500A DZ-HS500E

DZ-HS500SW DZ-HS501E DZ-HS503

DZ-HS803 DZ-HS903 DZ-M5000V5

DZ-M7000V5 DZ-M8000V6 DZ-MV350

DZ-MV350A DZ-MV350E DZ-MV380

DZ-MV380A DZ-MV380E DZ-MV550

DZ-MV550A DZ-MV550E DZ-MV580

DZ-MV580A DZ-MV580E DZ-MV730

DZ-MV730A DZ-MV730E DZ-MV750

DZ-MV750E DZ-MV750MA DZ-MV780

DZ-MV780A DZ-MV780E DZ-MV780R

DZ-MV780S

PANASONIC

NV-GS10 NV-GS100K NV-GS10B

NV-GS10EG NV-GS10EG-A NV-GS10EG-R

NV-GS10EG-S NV-GS120 NV-GS120B

NV-GS120EG-S NV-GS120GN NV-GS120GN-S

NV-GS120K NV-GS140 NV-GS140E-S

NV-GS140EG-S NV-GS150 NV-GS150B

NV-GS150E-S NV-GS150EG-S NV-GS158GK

NV-GS17 NV-GS17E-S NV-GS17EF-S

NV-GS180 NV-GS180E-S NV-GS180EB-S

NV-GS180EF-S NV-GS180EG-S NV-GS188GK

NV-GS188GK-S NV-GS200 NV-GS200B

NV-GS200EG-S NV-GS200GN NV-GS200K

NV-GS21 NV-GS21E-S NV-GS22

NV-GS22EG-A NV-GS22EG-S NV-GS230

NV-GS230E-S NV-GS230EB-S NV-GS230EG-S

NV-GS250 NV-GS250B NV-GS250E-S

NV-GS250EG-S NV-GS258GK NV-GS26GK
NV-GS26GK-S NV-GS27 NV-GS27E-S
NV-GS27EB-S NV-GS27EF-S NV-GS27EG-S
NV-GS280 NV-GS280EB-S NV-GS280EG-S
NV-GS28GK NV-GS30 NV-GS300
NV-GS300E-S NV-GS300EB-S NV-GS300EG-S
NV-GS308GK NV-GS308GK-S NV-GS30B
NV-GS320 NV-GS320E-S NV-GS320EB-S
NV-GS320EG-S NV-GS328GK NV-GS33
NV-GS330 NV-GS33EG-S NV-GS35
NV-GS35E-S NV-GS37 NV-GS37E-S
NV-GS37EB-S NV-GS37EG-S NV-GS38GK
NV-GS40 NV-GS400 NV-GS400B
NV-GS400EG-S NV-GS400GN NV-GS400K
NV-GS408GK NV-GS40B NV-GS44
NV-GS50 NV-GS500 NV-GS500E-S
NV-GS500EB-S NV-GS500EG-S NV-GS508GK
NV-GS508GK-S NV-GS50A NV-GS50A-S
NV-GS50AW NV-GS50B NV-GS50K
NV-GS50V NV-GS55 NV-GS55B
NV-GS55EG-S NV-GS55GN-S NV-GS55K
NV-GS58GK NV-GS58GK-S NV-GS60
NV-GS60EB-S NV-GS60EG-S NV-GS65
NV-GS70 NV-GS70A NV-GS70A-S
NV-GS70B NV-GS70K NV-GS75
NV-GS75B NV-GS75EG-S NV-GS78GK
NV-GS80 NV-GS80E-S NV-GS80EB-S
NV-GS80EG-S NV-GS85 NV-MX500A
PV-GS120 PV-GS150 PV-GS180
PV-GS19 PV-GS200 PV-GS250
PV-GS29 PV-GS300 PV-GS31
PV-GS320 PV-GS33 PV-GS34
PV-GS35 PV-GS36 PV-GS39
PV-GS400 PV-GS50 PV-GS500
PV-GS50K PV-GS50S PV-GS55
PV-GS59 PV-GS65 PV-GS70
PV-GS75 PV-GS80 PV-GS83
PV-GS85 SDR-H18 SDR-H20
SDR-H200 SDR-H20E-S SDR-H20EB-S
SDR-H20EG-S SDR-H250 SDR-H250E-S
SDR-H250EB-S SDR-H250EG-S SDR-H280
SDR-H288GK VDR-D100 VDR-D100EB-S
VDR-D150 VDR-D150E-S VDR-D150EB-S
VDR-D150EF-S VDR-D150EG-S VDR-D158GK
VDR-D160 VDR-D160E-S VDR-D160EB-S
VDR-D160EG-S VDR-D200 VDR-D210
VDR-D220 VDR-D220E-S VDR-D220EB-S

VDR-D220EG-S VDR-D230 VDR-D250
VDR-D250E-S VDR-D250EB-S VDR-D250EG-S
VDR-D258GK VDR-D300 VDR-D300E-S
VDR-D300EB-S VDR-D300EG-S VDR-D308GK
VDR-D310 VDR-D310E-S VDR-D310EB-S
VDR-D310EG-S VDR-D400 VDR-M30
VDR-M30K VDR-M50 VDR-M50B
VDR-M50EG-S VDR-M50PP VDR-M53
VDR-M55 VDR-M55E-S VDR-M70
VDR-M70B VDR-M70EG-S VDR-M70K
VDR-M70PP VDR-M75 VDR-M75E-S
VDR-M95