

Подходит к моделям:

PENTAX

MX-1 X90

RICOH

Caplio GR Digital Caplio GR Digital II Caplio GX100

Caplio R3 Caplio R30 Caplio R4

Caplio R40 Caplio R5 G600

G700 G700SE GR Digital III

GR Digital IV GX200

LEICA

C-LUX1 D-LUX 4 D-LUX2

D-LUX3

FUJIFILM

FinePix F20 FinePix F20 Zoom FinePix F40fd

FinePix F45fd FinePix F47fd

PANASONIC

Lumix DMC-FX07EF-S Lumix DMC-FS1 Lumix DMC-FS2

Lumix DMC-FX01 Lumix DMC-FX01-A Lumix DMC-FX01-K

Lumix DMC-FX01-P Lumix DMC-FX01-S Lumix DMC-FX01-W

Lumix DMC-FX01BB Lumix DMC-FX01BS Lumix DMC-FX01EB-K

Lumix DMC-FX01EB-S Lumix DMC-FX01EB-W Lumix DMC-FX01EF-A

Lumix DMC-FX01EF-K Lumix DMC-FX01EF-S Lumix DMC-FX01EF-W

Lumix DMC-FX01EG Lumix DMC-FX01EG-A Lumix DMC-FX01EG-K

Lumix DMC-FX01EG-S Lumix DMC-FX01GK Lumix DMC-FX07

Lumix DMC-FX07EF Lumix DMC-FX07EG Lumix DMC-FX07EGM

Lumix DMC-FX07K Lumix DMC-FX10 Lumix DMC-FX100EF-K

Lumix DMC-FX100EF-N Lumix DMC-FX100EF-S Lumix DMC-FX100EG

Lumix DMC-FX100EG-K Lumix DMC-FX100EG-S Lumix DMC-FX100GK

Lumix DMC-FX10A Lumix DMC-FX10EB-K Lumix DMC-FX10EB-S

Lumix DMC-FX10EF-S Lumix DMC-FX10EG Lumix DMC-FX10EG-A

Lumix DMC-FX10EG-S Lumix DMC-FX10P Lumix DMC-FX10S

Lumix DMC-FX12 Lumix DMC-FX12EB-K Lumix DMC-FX12EB-S

Lumix DMC-FX12EF-S Lumix DMC-FX12EG Lumix DMC-FX12EG-K

Lumix DMC-FX12EG-S Lumix DMC-FX12GK Lumix DMC-FX12K

Lumix DMC-FX12S Lumix DMC-FX150 Lumix DMC-FX150EFK

Lumix DMC-FX150K Lumix DMC-FX150S Lumix DMC-FX180

Lumix DMC-FX180GK Lumix DMC-FX180K Lumix DMC-FX180N

Lumix DMC-FX180S Lumix DMC-FX3 Lumix DMC-FX3EF

Lumix DMC-FX3EF-S Lumix DMC-FX3EG Lumix DMC-FX3EG-S

Lumix DMC-FX3EGM Lumix DMC-FX3K Lumix DMC-FX3S

Lumix DMC-FX50 Lumix DMC-FX50EF Lumix DMC-FX50EG

Lumix DMC-FX50EGM Lumix DMC-FX50K Lumix DMC-FX8

Lumix DMC-FX8-A Lumix DMC-FX8-K Lumix DMC-FX8-P

Lumix DMC-FX8-S Lumix DMC-FX8BS Lumix DMC-FX8EBB
Lumix DMC-FX8EG-A Lumix DMC-FX8EG-K Lumix DMC-FX8EG-P
Lumix DMC-FX8EG-S Lumix DMC-FX8GK Lumix DMC-FX8GN
Lumix DMC-FX9 Lumix DMC-FX9-H Lumix DMC-FX9-K
Lumix DMC-FX9-R Lumix DMC-FX9-S Lumix DMC-FX9BB
Lumix DMC-FX9BS Lumix DMC-FX9EB-K Lumix DMC-FX9EB-S
Lumix DMC-FX9EBS Lumix DMC-FX9EF-K Lumix DMC-FX9EF-S
Lumix DMC-FX9EG Lumix DMC-FX9EG-K Lumix DMC-FX9EG-R
Lumix DMC-FX9EG-S Lumix DMC-FX9GK Lumix DMC-FX9GN
Lumix DMC-LX1 Lumix DMC-LX1-K Lumix DMC-LX1-S
Lumix DMC-LX1EG-K Lumix DMC-LX1EG-S Lumix DMC-LX1GK
Lumix DMC-LX1GN Lumix DMC-LX1K-B Lumix DMC-LX1S-B
Lumix DMC-LX2 Lumix DMC-LX2EF Lumix DMC-LX2EF-S
Lumix DMC-LX2EG Lumix DMC-LX2EG-K Lumix DMC-LX2EG-S
Lumix DMC-LX2EGM Lumix DMC-LX2K Lumix DMC-LX2S
Lumix DMC-LX3 Lumix DMC-LX3EF-K Lumix DMC-LX3GK
Lumix DMC-LX3K Lumix DMC-LX3S Lumix DMCLX1BS

SAMSUNG

HMX-R10 HMX-R10BP HMX-R10EDC
HMX-R10SP