

Подходит к моделям:

Acer aspire one ZG5.

Dell Inspiron Mini 9.

Dell Inspiron Mini 10.

Dell Inspiron Mini 12.

Aspire One - 10.1":

AOD150-1739.

AOD150-1462.

AOD150-1322.

AOD150-1860.

AOD150-1669.

AOD150-1165.

AOD150-1577.

AOD150-1920.

AOD150-1186.

AOD150-1125.

AOD150-1647.

AOD150-1606.

AOD150-1240.

AOD150-1044.

AOD150-1197.

AOD150-1587.

Aspire One - 8.9":

AOA150-1126.

AOA150-1447.

AOA150-1983.

AOA150-1049.

AOA150-1672.

AOA110-1995.

AOA110-1834.

AOA110-1588.

AOA110-1137.

AOA150-1141.

AOA150-1483.

AOA150-1068.

AOA150-1485.

AOA150-1359.

AOA150-1553.

AOA150-1505.

AOA150-1784.

AOA150-1329.

AOA150-1316.

AOA150-1348.

AOA150-1444.

AOA150-1987.

AOA150-1405.

AOA150-1435.

AOA150-1905.

AOA150-1083.

AOA150-1400.

AOA150-1786.

AOA150-1178.

AOA150-1949.

AOA150-1742.

AOA150-1864.

AOA150-1706.

AOA150-1887.

AOA150-1622.

AOA150-1690.

AOA150-1555.

AOA150-1635.

AOA150-1798.
AOA150-1570.
AOA150-1777.
AOA150-1679.
AOA150-1649.
AOA150-1035.
AOA150-1029.
AOA150-1172.
AOA150-1504.
AOA110-1662.
AOA150-1382.
AOA110-1831.
AOA110-1295.
AOA110-1041.
AOA110-1626.
ACER Aspire One:
A110-AB.
A110-1295.
A110X.
A110L.
A150-Aw.
A150-Bb.
A150-Bb1.
A150-1006.
A150-1049.
A150-1126.
A150-1249.
A150-1447.
A150-1890.
A150L.
A150X.
AOA110-1283.
AOA110-1295.
AOA110-1722.
AOA110-1982.
AOA150-Ab.
AOA150-1001.
AOA150-1126.
AOA150-1140.
AOA150-1405.
AOA150-1435.
AOA150-1570.
AOA150-1649.
AOA150-1672.
AOA150-1777.
AOA150-1840.
ZG5 (Linux)