

Совместим с:

Chromebook 14 G3.
Chromebook 14-x000na.
Chromebook 14-x000no.
Chromebook 14-X001TU.
Chromebook 14-X002TU.
Chromebook 14-x003nf.
Chromebook 14-x003no.
Chromebook 14-X003TU.
Chromebook 14-x004na.
Chromebook 14-X004TU.
Chromebook 14-X005TU.
Chromebook 14-x006na.
Chromebook 14-X006TU.
Chromebook 14-X007TU.
Chromebook 14-X008TU.
Chromebook 14-X010CA.
Chromebook 14-X010NR.
Chromebook 14-X010WM.
Chromebook 14-X013DX.
Chromebook 14-X015WM.
Chromebook 14-x016na.
Chromebook 14-x017na.
Chromebook 14-x020na.
Chromebook 14-X020NR.
Chromebook 14-X021DS.
Chromebook 14-X022DS.
Chromebook 14-X023DS.
Chromebook 14-x023na.
Chromebook 14-X030NR.
Chromebook 14-x031nb.
Chromebook 14-x033nb.
Chromebook 14-x034nb.
Chromebook 14-X040NR.
Chromebook 14-x050na.
Chromebook 14-x050no.
Chromebook 14-X050NR.
Chromebook 14-x051no.
Chromebook 14-x053no.
Chromebook 14-x054na.
Chromebook 14-x055na.
Chromebook 14-x056na.
Chromebook 14-x094nf.
Chromebook 14-x095nf.
Chromebook 14-x096nf.
Chromebook 14-x097nf.
Stream 14-z000na.
Stream 14-z000ne.
Stream 14-z000nm.
Stream 14-z000no.
Stream 14-z000nr.
Stream 14-z000ns.
Stream 14-z000nx.
Stream 14-z001na.
Stream 14-z002na.
Stream 14-z005nf.
Stream 14-z005nl.

Stream 14-z010ca.
Stream 14-z010nr.
Stream 14-z026la.
Stream 14-z028la.
Stream 14-z040wm.
Stream 14-z050na.
Stream 14-z050ng.
Stream 14-z050sa.
Stream 14-z051ng.
Stream 14-z090ng.