


# Montaj Talimatları









## Installation instructions

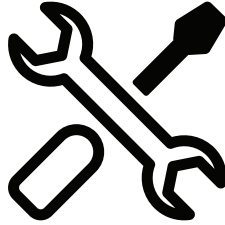


K69400





Document Number: 5858790100 - AJ

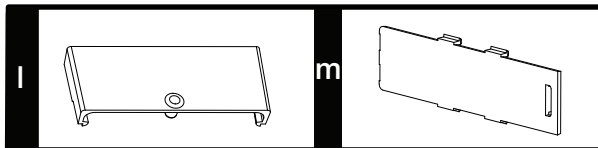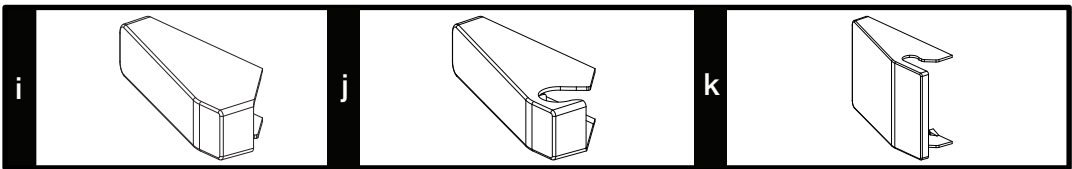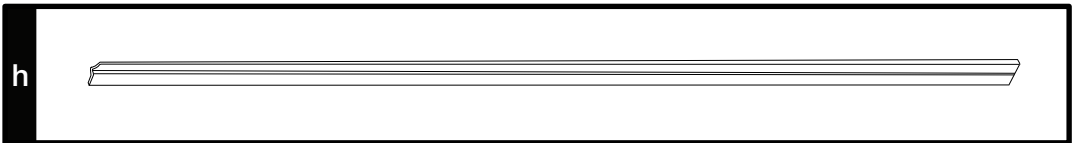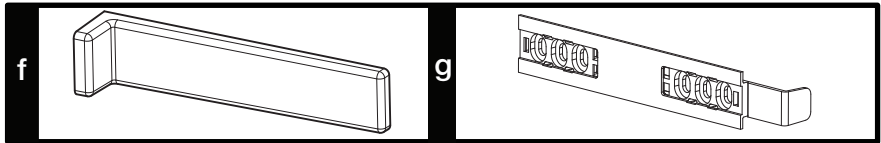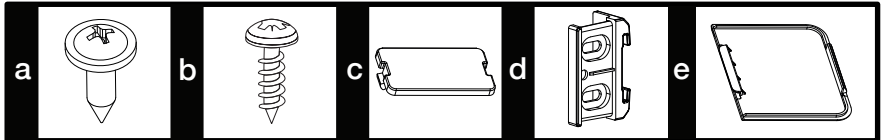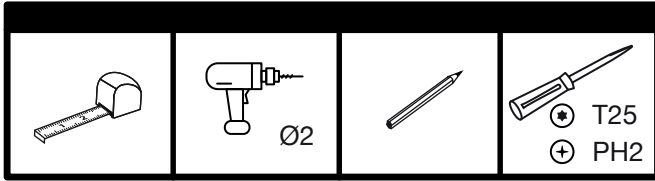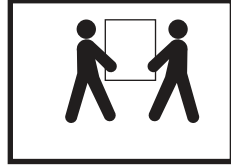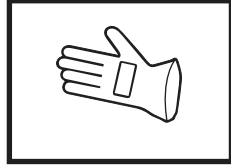



1

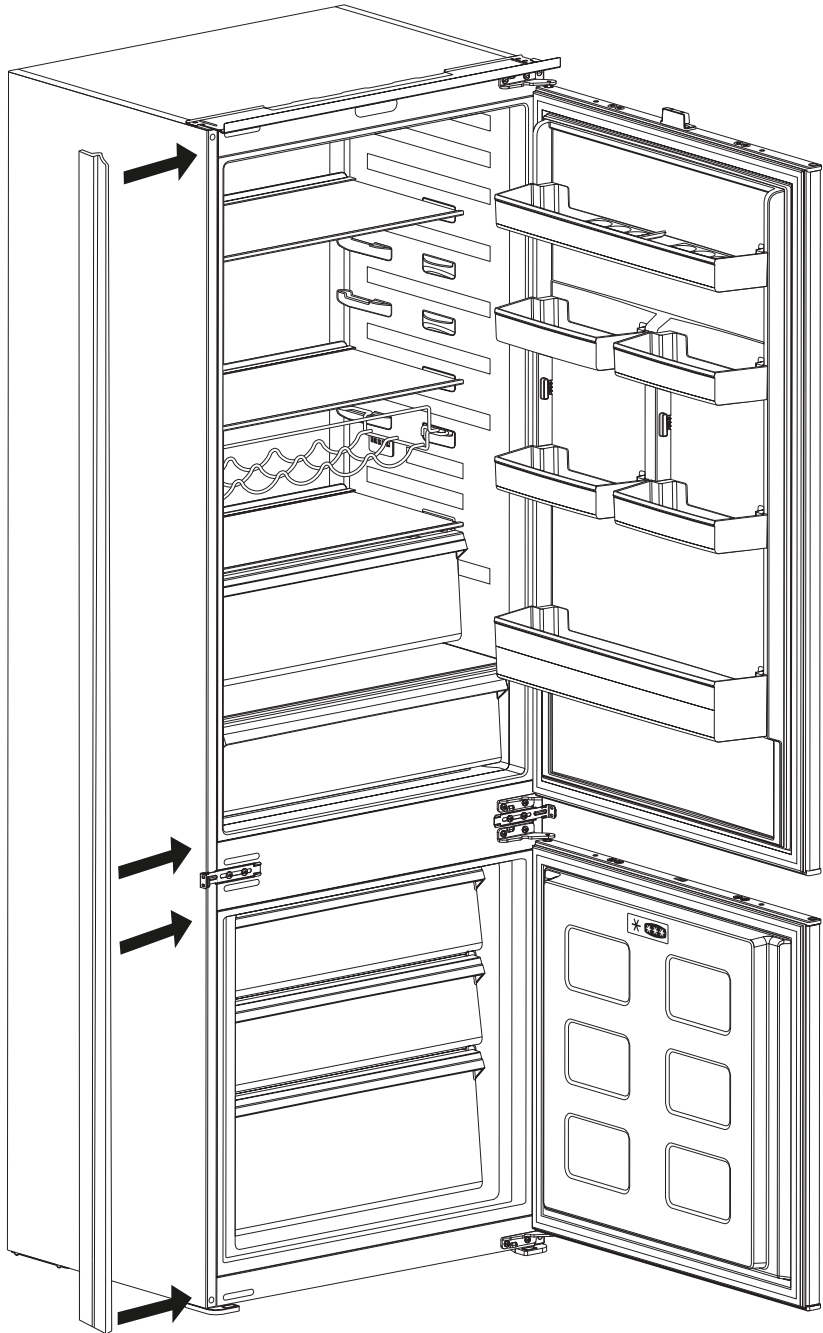

2

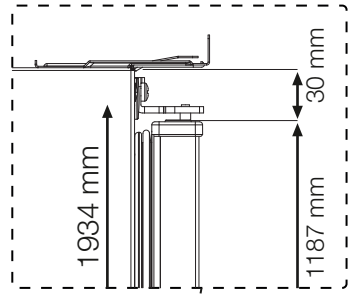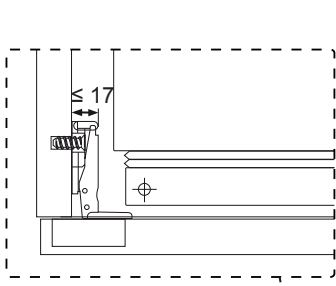

min. 200 cm<sup>2</sup>

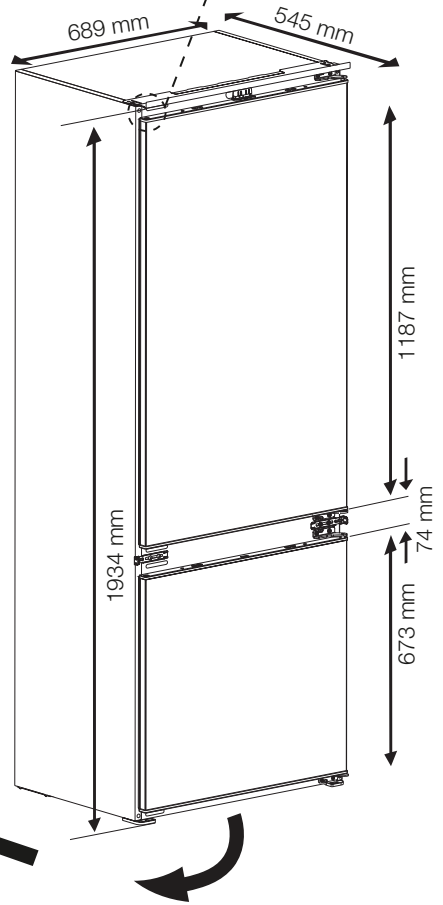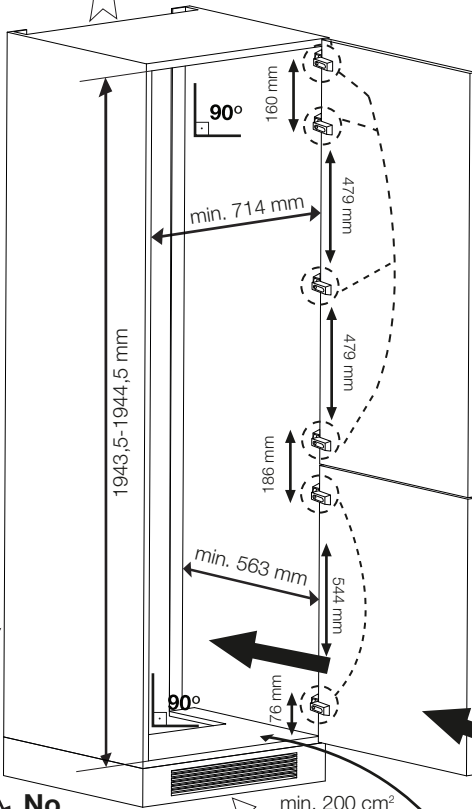



**No wooden back wall**




min. 200 cm<sup>2</sup>

min 200cm<sup>2</sup>


3

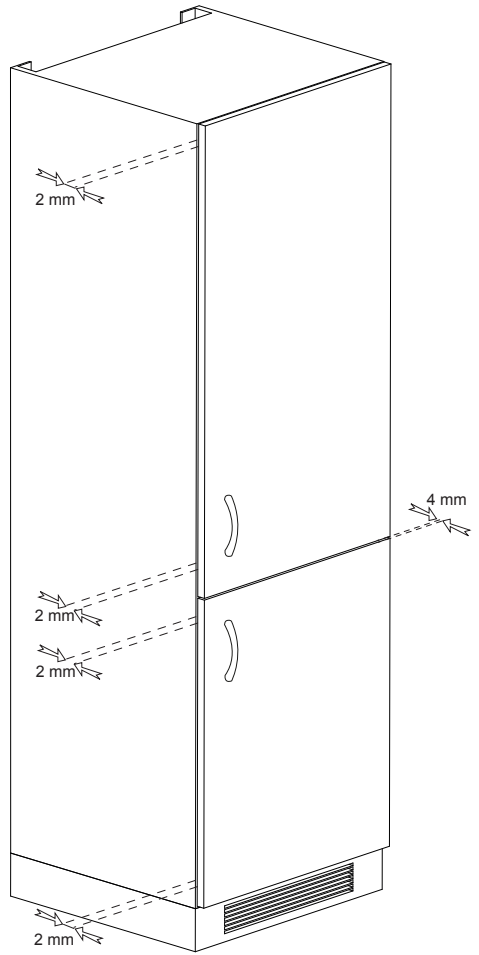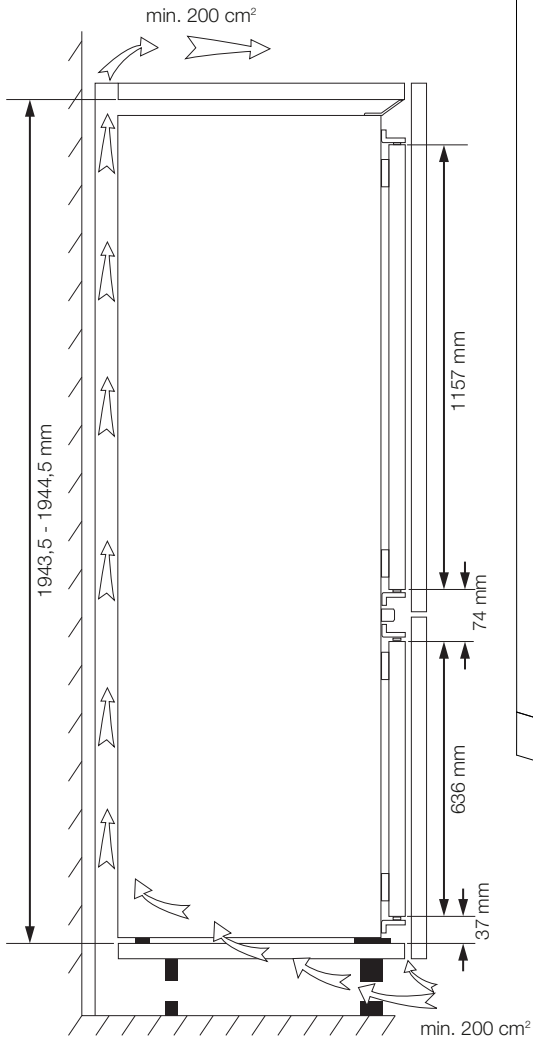


4.1

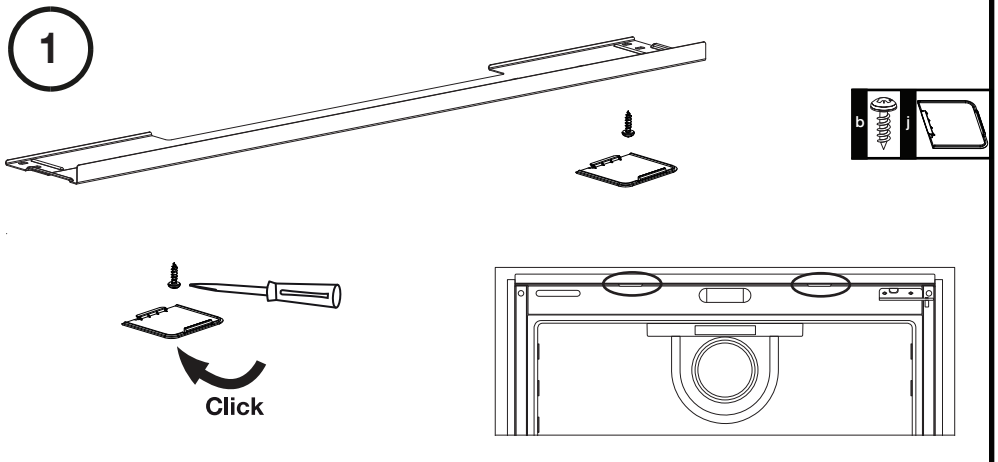



4.2


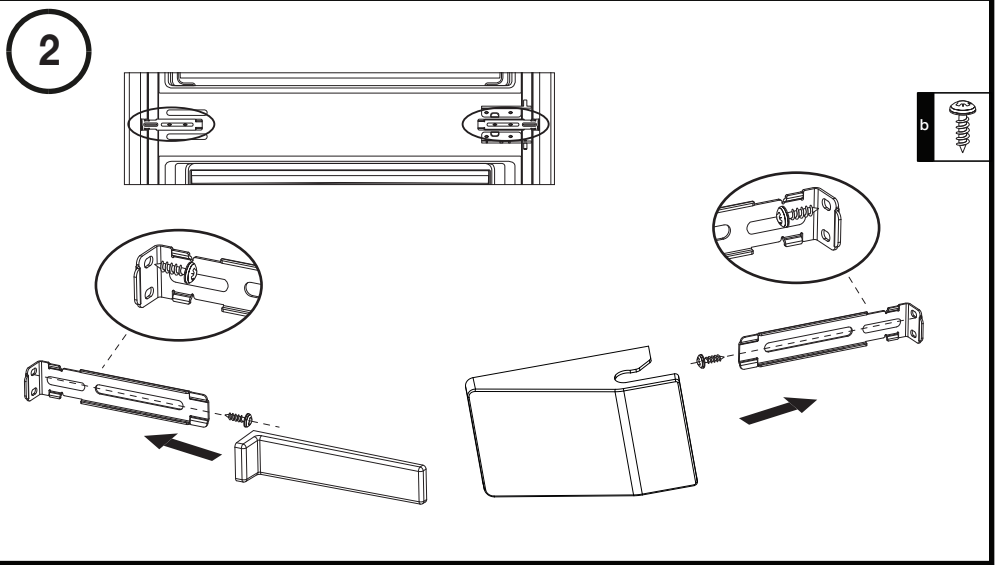


4.3

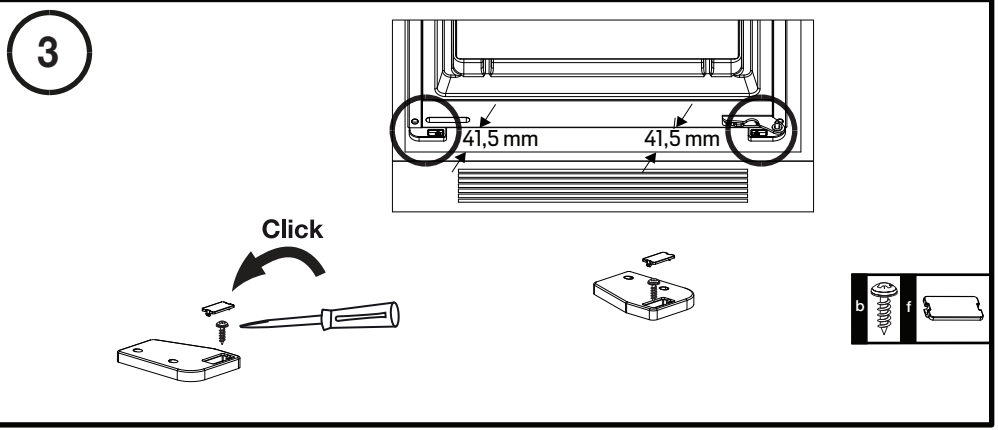


5

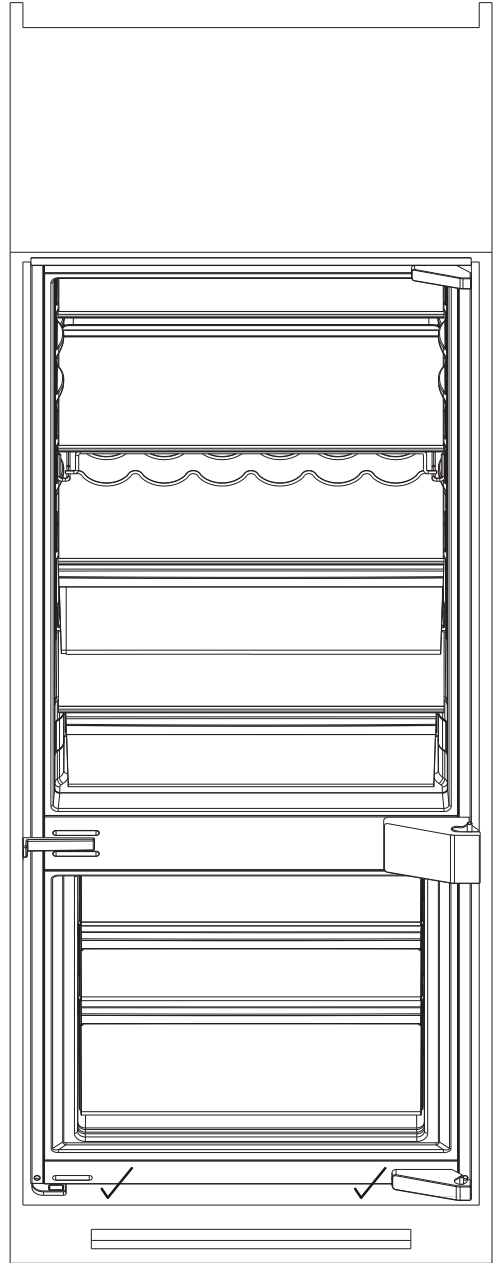
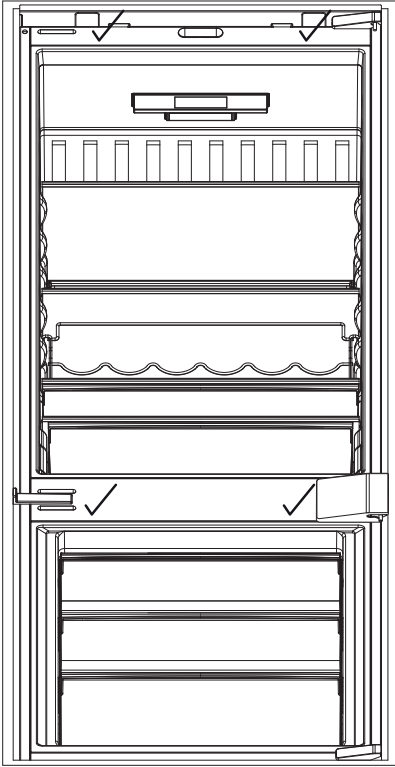


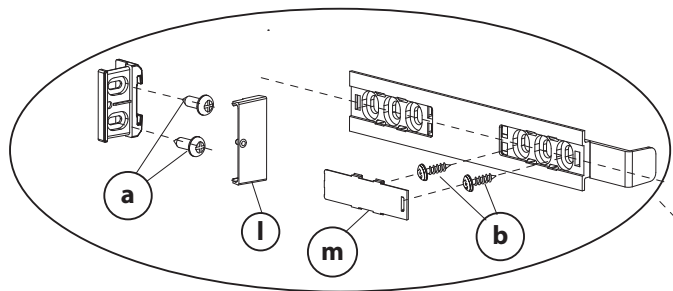



6


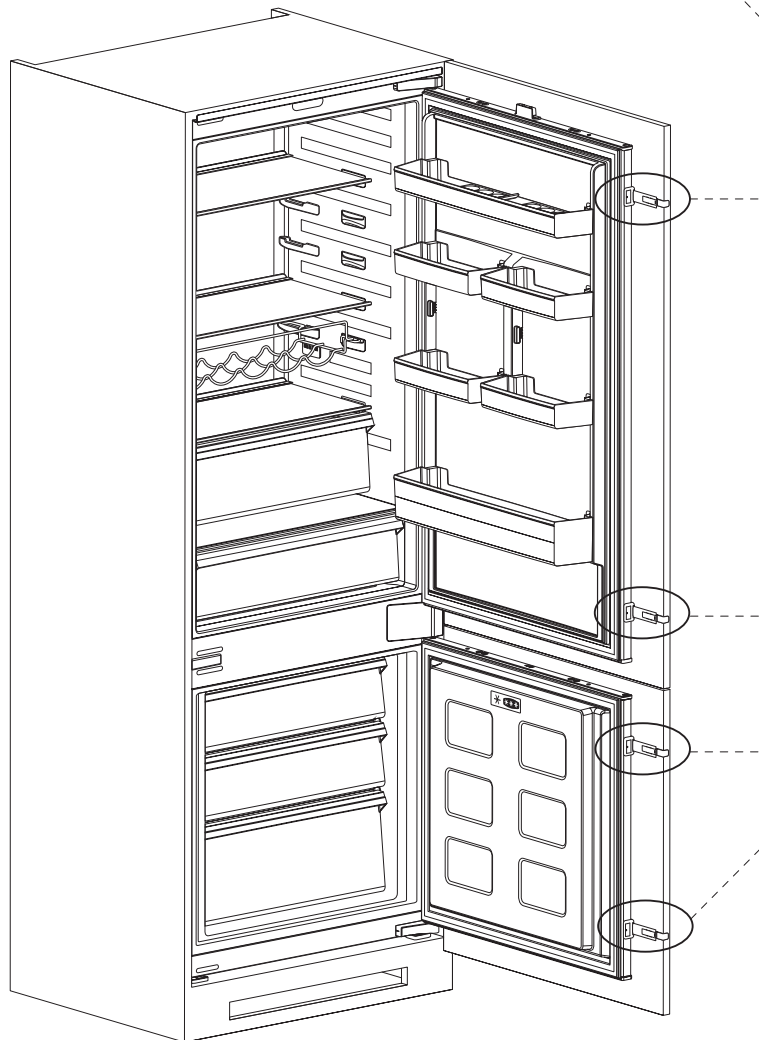




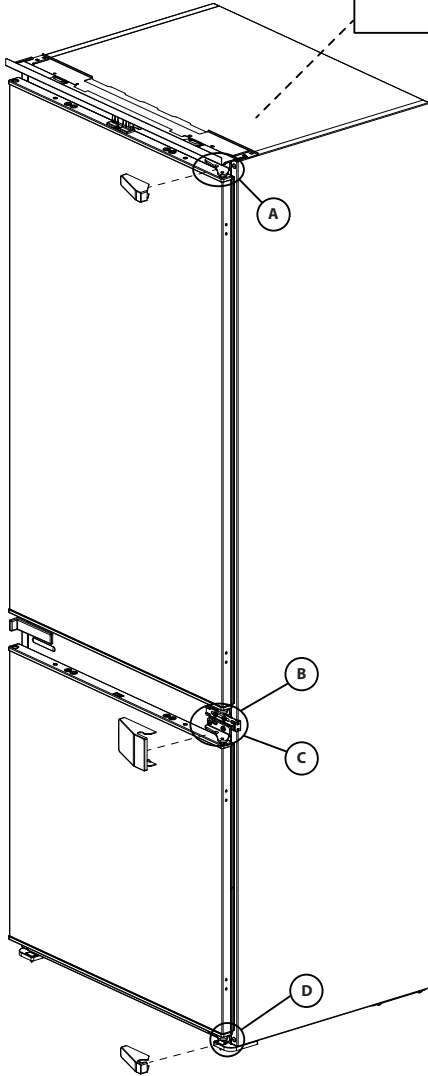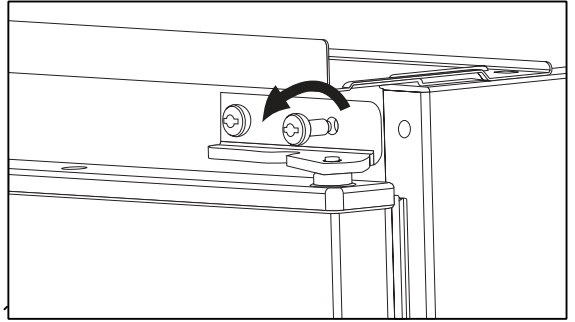


7

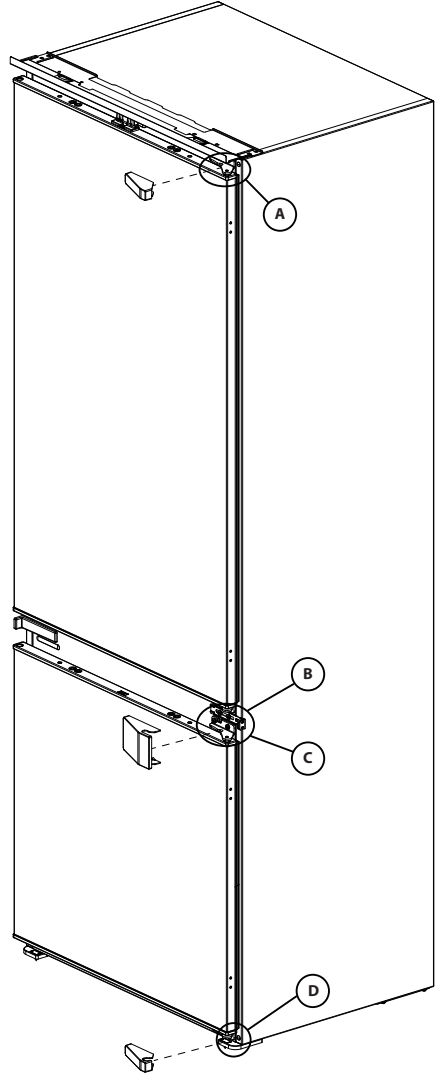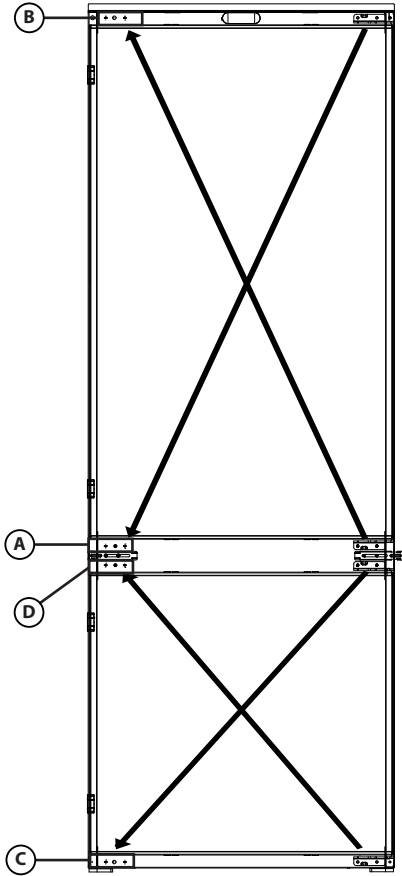

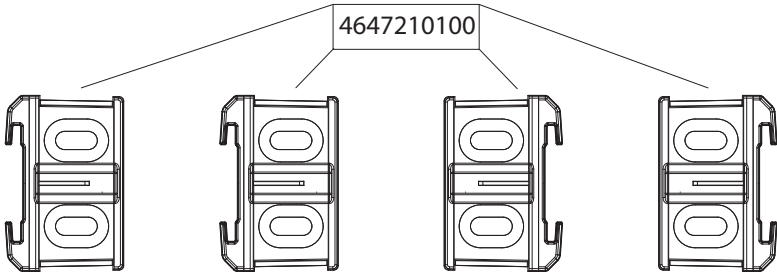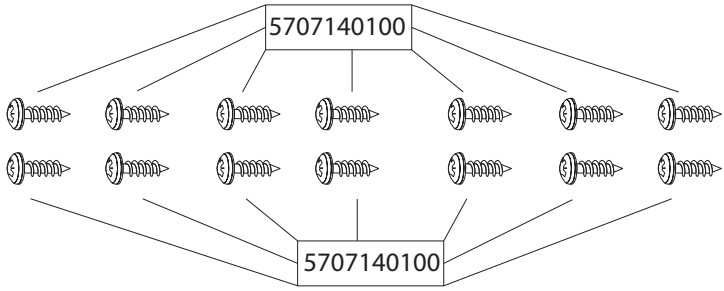


5842140100



4049730100



5842130200



5842130100

